




POWER MODULE

INSTRUCTIONS

300 SERIES TOYOTA LANDCRUISER

POWER MODULE INSTRUCTIONS

1. Make sure the Engine and Ignition are Switched Off.
2. Open the Bonnet of the Vehicle.
3. Remove Engine Cover, Battery Cover, and Brake Reservoir Cover.
4. Open the Torqit Power Module Box and Locate the Electronic Harness.
5. You will see on the harness 6 x Male Injector Harness Plugs, 6 x Female Injector Harness Plugs, and 1 x Boost sensor Plug
6. On each Injector Plug, they are numbered 1 – 6. Once located, please take note of the diagram below and the layout. Each number corresponds to each Cylinder.

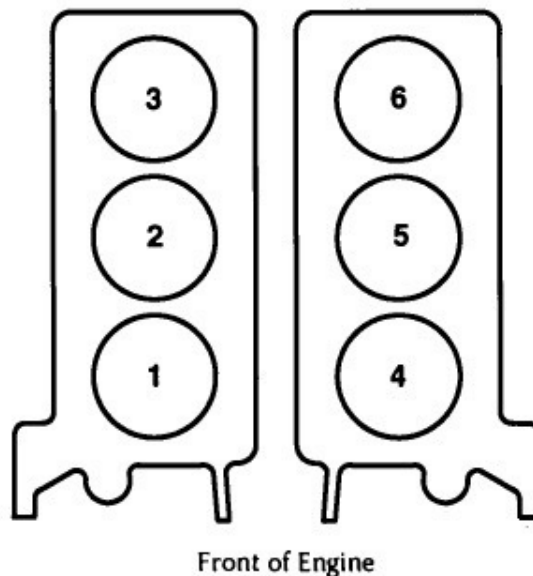

7. Place injector Plugs 1, 2, and 3 down the Right Side of the engine, and then run injector plugs 4, 5, and 6 down the left side of the engine.
8. Locate engines boost pressure sensor (rear of engine on top). You will notice this vehicle is fitted with 2 boost pressure sensors. The sensor we require is the one with the black Plug. Plug in the Boost pressure harness.
9. One by one, disconnect each injector harness from the engine's injectors.
10. Now fit the Torqit Power Module harness to the Injectors and the Engines factory injector Harness.
11. Make sure that the harness' are not getting caught on any sharp edges or on anything hot.

POWER MODULE INSTRUCTIONS

12. Secure the harness for the Boost pressure sensor and all the Injector harness' along the vehicle's existing wiring harness. We would recommend doing this with cable ties.
13. Mount the Power Module behind the Right-hand headlight and cable tie it to either the fuse box or the power steering reservoir. The other location you could mount this is below the plastic cover for the Brake master cylinder and brake lines.
14. Once all the injectors and the boost pressure sensor harness's are connected, now connect the main connector to the Torqit Power Module.
15. Now start the Vehicle, confirm that there is no fault codes on the instrument cluster. If there is, please check all connectors and harness to confirm all are plugged in correctly.
16. If no lights on dash, Road Test Vehicle and Enjoy.

POWER MODULE APP INSTRUCTIONS

GETTING STARTED WITH THE TORQIT POWER MODULE APP

1. Download the App

Install the "**Tuning Control App**" from your device's app store.

2. Power On Your Vehicle

Turn your key to the "**Ignition**" position (accessory mode is not sufficient).

3. Connect to the Module

Once the app finishes scanning, select the "**TUNING BOX**" option.

4. Enter Your PIN

Enter the PIN found in your instruction manual.

(You'll only do this once.)

You'll also be prompted to name your device — this isn't critical but can help with identification later.

5. You're Connected

Your device is now paired with the Power Module.

The system will default to the **C6 setting** each time the vehicle is turned on.

UNDERSTANDING THE SETTINGS

- **Top Row (A-E):** Tune Modes

- **A & B** - Eco
- **C & D** - Tow
- **E** - Power

- **Bottom Row (0-9):** Intensity Level

Think of it like a CD player:

- The **top row** is the *track* (tune mode)
- The **bottom row** is the *volume* (intensity level)

You can mix and match these settings to customise the driving experience to suit your style.